



Norway Council
www.spe.no

The First

SPE Norway magazine

*To gather members
To share knowledge*



In this issue

4 Regional Awards to SPE Norway
Success predictions—Australian view
World Class Drilling from Aker BP
Impressive computing from RFD
and much more...

Special topic - Electromagnetic Exploration

EMGS Gemini North prediction
PGS EM integrated solution
and EM HIGH RES techniques

tNavigator®

IS YOUR RESERVOIR SIMULATION SOFTWARE PREHISTORIC?

Change is constant. Shouldn't reservoir simulation software keep pace?
Today's standard software is nearly extinct. With tNavigator, you won't suffer
the same fate. Why? Because tNavigator offers a multi-platform, multi-scale
complete solution. So don't go the way of the dinosaurs—switch to tNavigator.

Get your free trial at tNavigator.com

POWERED BY **RFD**
Rock Flow Dynamics

Inside this issue

www.spe.no

Dear SPE The First reader,

The SPE Norway 2016/2017 Season is coming to its end. Filled with awards, surprises and wonderful moments, it has allowed us to learn, inspire and progress. The incredible Bergen One Day Seminar and Harstad Workshop in the Arctic proved one more time they deserve to be listed as international SPE events, gathering many members and followers and giving valuable knowledge exchange. Technical nights, games, breakfast/lunch/dinner, social events like BBQ, Sailing etc. are only a few of the various events that the SPE Norway offers us. We can be proud of SPE Norway programme. Do not miss the last event at your section this Season, before going on holidays!

Our young Magazine is celebrating its two years' anniversary as SPE Norway regional publication, and three years since it was first launched by the Oslo section. Looking back at the history – we have grown a lot! It is incredible, after just two years we have been noticed: the SPE Presidents writing for us, having been mentioned at the annual main SPE conference (ATCE), articles from our members and SPE friends sharing their passion within the SPE Norway community.

As The First editors, we try to invite authors from abroad to share their ideas with our industry sector. We have published articles from authors from our neighboring countries, some of whom have even become our regular contributors, some from West and Middle East.

This issue is no exception! The Australian experience in the concepts of exploration chance of success predictions are shared with the Northern society. In addition, High Resolution Electromagnetic Exploration method and approach from neighboring Russia and from the local and leading EM marine companies are shared in this issue.

If I may reserve of your time for one more thought. In the search for interesting ideas to share in The First and looking for possible authors, I scan regularly updates in social media and in particular, LinkedIn. Being a woman in the industry and having working experience from some of the harshest environments like working behind the Arctic Circle on the rig with outside temperatures -37 C and wind 17 m/s, or in desert with +55C, I do appreciate seeing many events organized for women in the industry. Large oil&gas companies continuously post on LinkedIn and Facebook events like “Women in industry days”, or special events at conferences just for women, women recognition and awards. But! I cannot see anything being organized for men! Are there no men on the platforms? Do they not feel cold and tired? Do they not work in hard conditions? Do they not work under stress? Do they not make discoveries? I respect and will always remember my first male field manager. He was supposed to be working just in the office, but facing shortage of field personnel available, he could as easily work in the workshop and run it at the rig being at the same time a FSM, Supervisor, operator and any other function needed - all of that in one person! I believe men in our industry are not enough appreciated. Especially those born in the 90es, and making their careers in the interesting time of trending “Women in the industry” events. So, our dear men, we, professional women in the industry, would like to invite you to celebrate yourself and your great achievements! We cherish you, we support you and we appreciate you. To balance the injustice, come and join us

“Celebration of the Men in Industry”, September 7, Oslo, Beer Palace. The sponsor Rock Flow Dynamics offers the first drink for free.

More information will follow.

Let us organize events and reward on merit and not by gender.

Enjoy reading The First and as usual, do not forget to provide us feedback!



On behave of editorial team,
Vita Kalashnikova

SPE The First Editorial team:



Vita Kalashnikova
*QI Geophysicist,
PSS-Geo AS*

Maria Djomina
*Communications Manager,
AGR*



Editorial content

News from SPE Norway sections

5

Technical Articles

Exploration Chance of Success Predictions - Meanings, Perplexities and Impact
by Balakrishnan Kunjan

10

World Class Drilling Operations
by Torgeir Anda, Aker BP

16

Removal of solids from well flow using dynamic desander technology boosts production and simplifies interventions
by Dmitri Gorski, Senior Process Engineer, BRI

18

Well clean out after reperforation 98% separation efficiency
by Giedre Malinauskaite, Marketing Manager, FourPhase

21

tNavigator scales to GPU's
by Dmitry Eydinov, Rock Flow Dynamics

23

Cased Hole Reservoir Layer Pressure
by Remke Ellis and Rita-Michel Greiss, TGT Oilfield Services

26

Exceptional Data, Swift Turnaround, Reduced Exposure
by Marc Rocke, Geophysicist, Polarcus

28

Why EM is not like Seismic?
EM for HC in simple words & High Resolution EM technique
by Vita Kalashnikova

30

PGS Towed streamer EM

37

EMGS Gemini North prediction

38

SPE Oslo
SPE Stavanger
SPE Bergen
SPE Northern Norway
SPE Trondheim

The First is SPE Norway Regional publication and is distributed to a multidiscipline audience. Circulation: 200 printed copies, 4,500 electronic copies
The electronic version of this Issue and previous Issues are available on SPE Norway websites.

The editorial team takes no responsibility for accuracy or content of the articles provided. Technical articles, professional overviews and SPE section news have no editorial fee. The editors are working on voluntary basis.

If you would like to support production of our magazine by publishing commercial information about your product/company, please contact editorial team.
Editors: Vita V Kalashnikova vita@pss-geo.no
Maria Djomina Maria.Djomina@agr.no

Page 24

SPE Norway – Reservoir simulation


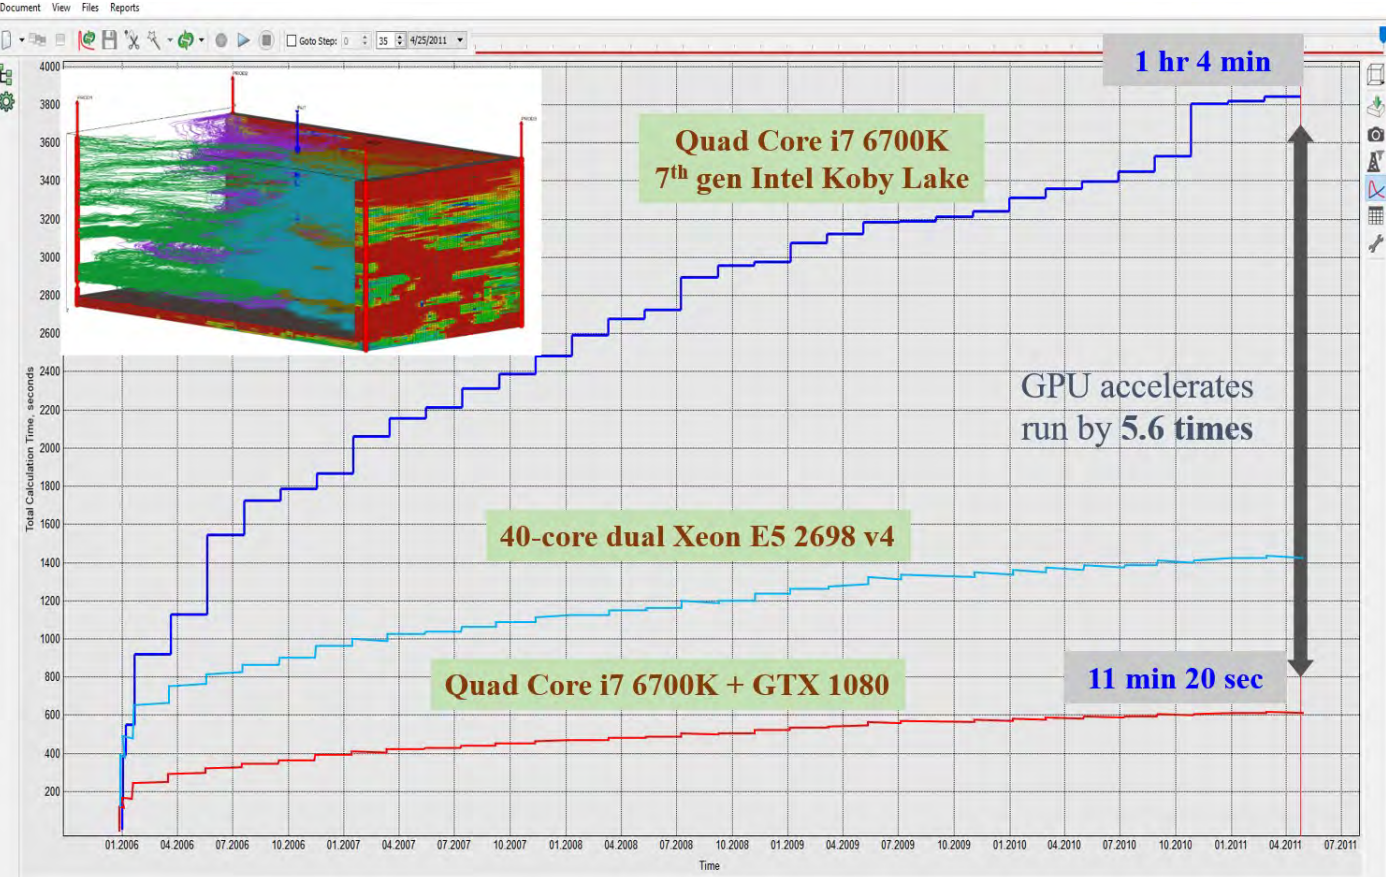


Figure 2. SPE 10 benchmark for simulation time. 4-cores laptop – dark blue line; Dual-CPU workstation – light blue line; 4-cores laptop with GPU – red line.

with 4-cores CPU, powerful dual-CPU workstation (somewhat like HP z840) and the laptop from the first test but with GPU enabled for computations. As you can see from the figures, the difference in the simulation time between the cases with and without GPU is 5-6 times. The simulation time is reduced significantly, without too much investment in hardware. You can find a laptop of this kind in any

hardware shop for about \$2000. It is also worth mentioning that a machine like this outperforms a significantly more expensive workstation with 40 CPU cores (~\$15000) by about 2 times. It is actually quite difficult to predict where the hardware competition is going to go in the near future. Even before the end of this year we can expect several releases of the new

chips by Intel, NVidia and AMD. Time will tell who is going to deliver the best results, but there is no doubt that the high-performance hardware world is changing rapidly these days and we can expect reservoir simulations to run significantly faster in the near future. The race is definitely going to be interesting...

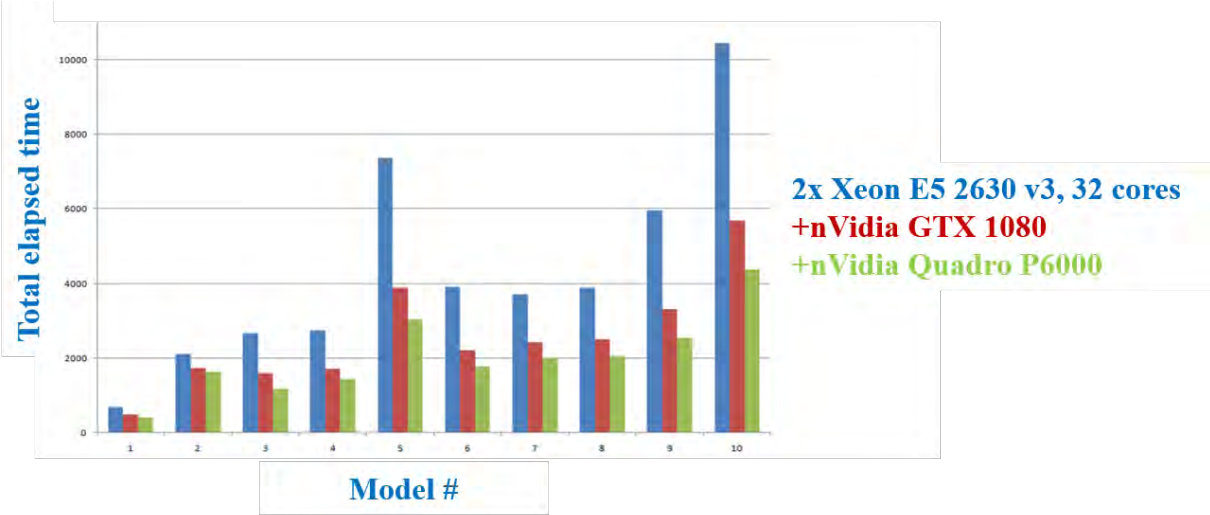

Comparison of the simulation time on 10 random real-field 3-phase black-oil models.


TGT

OUR TECHNOLOGIES

CORROSION LOGGING TOOLS

Multistring Imaging technology to detect metal loss due to corrosion or other factors.

INDIGO
EmPulse-3

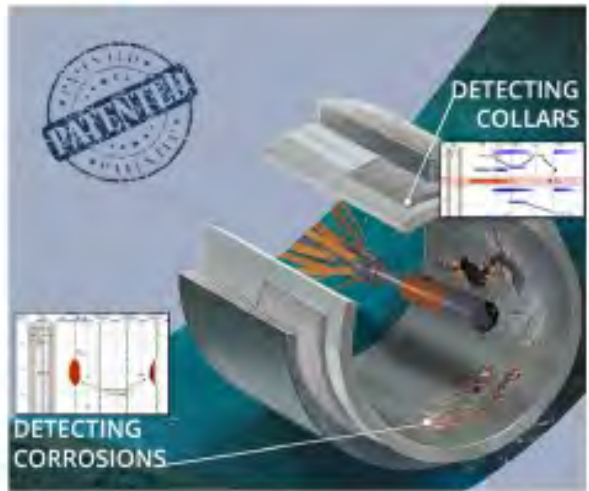

SPECTRAL NOISE LOGGING TOOLS

High Definition Spectral Noise Technology to detect flow-related features.

SNL HD
INDIGO



TERMOSIM™ TECHNOLOGY

High Precision Temperature gauges and hydrodynamics simulation software to analyze the operating conditions and integrity of wells.



PRODUCTION LOGGING TOOLS

Indigo dowhole toolfleet for conventional logging: Temperature, Pressure, Gamma Ray, Casing Collar Locator, Head Exchange, Fluid Capacitance and Induction Resistivity.



Cased Hole Reservoir Layer Pressure

by Remke Ellis and Rita-Michel Greiss, TGT Oilfield Services



Remke Ellis
Reservoir Engineer
Domain Champion



Rita-Michel Greiss
Business Development Manager

One of the most critical measurements for reservoir management is that of formation layer pressure. Various methods are employed to determine reservoir pressure however many techniques only measure average reservoir pressure and should not be used for multi-zone reservoirs that are differentially depleted. Multi-rate PLT method is used to measure formation pressure across individual perforation intervals, but the assumptions that all fluid exiting / entering a perforation interval is confined to a particular unit (i.e. there is no fluid redistribution behind pipe) and uncertainties in unit thickness can result in significant errors. Triple Rate Spectral Noise Log method (TSNL), measures the pressure for each active layer independently, regardless of behind pipe fluid redistribution. TSNL, is based on the same hydraulic diffusivity equations as multi-rate PLT method but uses reservoir flow Noise Powers (NP) instead of transperforation flow rates (Q). This means that flowing reservoir units are evaluated independently even when fluid from multiple layers commingle to the same perforation intervals. Furthermore SNL directly measures effective formation (flowing) thicknesses behind pipe¹, which is an important input for the technique and also enables assessment of reservoir performance and helps refine estimation of reserves.

Triple Rate SNL (TSNL) Technology
SNL-HD is a passive tool, comprising of a battery, electronics and hydrophone with unrivalled sensitivity. The tool records the frequencies and amplitudes of acoustic energy associated with movement of fluid. Frequencies in range of 8 to 58,500 Hz are recorded in 115 Hz wide bands (512 chan-


nels). Each band has its own specific noise intensity. The tools dynamic range is 90 dB. This means that even when certain frequencies are very intense the less intense frequencies are not masked. The frequency bands and associated intensities / amplitudes for each station depth are then displayed on a SNL data panel (see figure 1).

Analysis of the data panel provides insight to the origin and character of fluid flow. The frequency of fluid movement is inversely proportional to the size, or aperture, of the flow path. For example, flow through large pores generates lower frequency noise than flow through small pores. Flow through open pipe will generate lower frequencies than that through a fracture. This principle enables High Definition Spectral Noise Tool (SNL-HD) to distinguish between the different sources and pathways of fluid movement, so commingled channeling and borehole noise can be separated from actual formation layer noise. The noise pattern geometry helps reveal the source of the noise; reservoir noise is characterized by wide frequency range streaks over discrete depth intervals, while borehole or cement channelling noise have much lower frequencies, narrower frequency range and are tracked over long depth intervals (parallel with wellbore).

The SNL-HD panel shows noise data in three dimensions: Depth, Frequency and Amplitude. Figure 1 illustrates noise acquired by SNL-HD for different fluid movement pathways. Displaying the SNL-HD data like this means that the noise associated with individual unit reservoir flow can be distinguished from that associated with the commingled borehole and cement channeling noise, allowing for each layer to be assessed independently². The intensity (amplitude) of fluid flow noise is directly proportional to the product of flow rate and differential pressure. These relationships that determine frequency and intensity form the basis of TSNL technique.

TSNL Concept of Measurement
This technique uses hydraulic diffusivity equations in conjunction with SNL noise power ratios in order to determine external boundary pressure of reservoir zones under flowing conditions. McKinley¹ pioneered the first

Figure 1 SNL-HD Interpretation Fundamentals

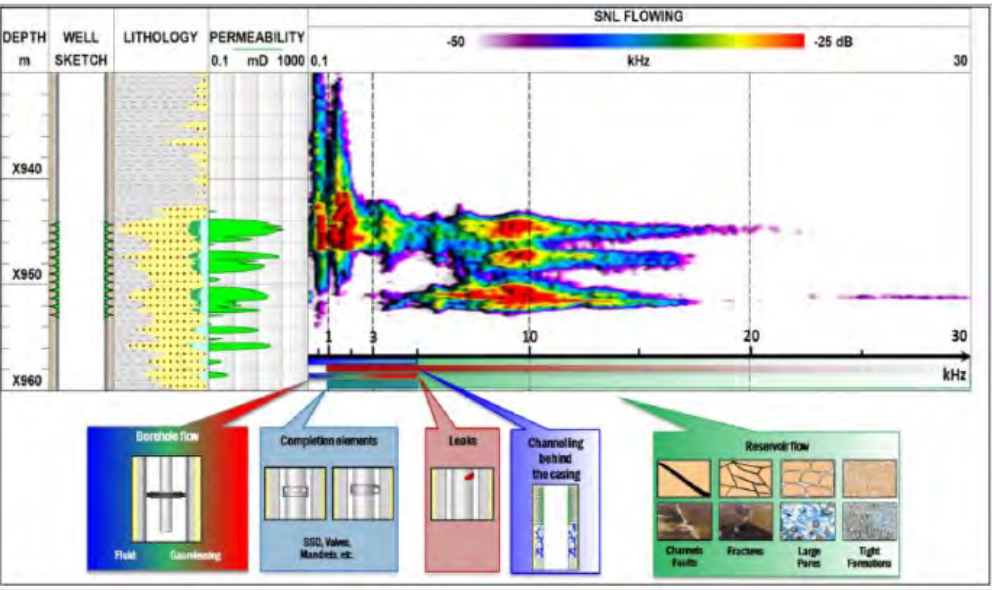

¹ A.Aslanyan and I.Aslanyan, TGT Oil and Gas Services, Assessing Macroscopic Dynamical Permeability Through Pressure and Noise Analysis
² Yu.S.Maslennikova, V.V.Bochkarev, A.V.Savinkov and D.A.Davydov, TGT Prime. Spectral Noise Logging Data Processing Technology, SPE 162081, 2012

laboratory studies investigating the relationship between energy dissipated by fluid flow through a media (equivalent to the product of flow rate and pressure differential) and the strength of associated acoustic signal generated (noise power). Figure 2 presents McKinley’s results, revealing a linear though scattered relationship. The scattered distribution of McKinley’s data is linked to limitations of the equipment used at the time. Noise Power (NP) represents a fraction of kinetic energy that is lost from the system as noise, so it is not surprising that it varies linearly with system enthalpy. Little or no research work has been done since the McKinley experiments, until 2012 when the implications of what the study revealed were realised.

Proportionality of NP with energy dissipation (Q.dP) allows for the substitution of Q with NP in hydraulic diffusivity equations (see SPE 177892). This means that a producing / injecting well can be kept on line, and simply by varying the flow rates one can determine pressure of flowing units. Unlike PTA with downhole gauges or multi-rate PLT method, TSNL records NP specific to discrete flow units, and can therefore determine individual layer pressures, even behind pipe.

Examples in Silicacious Deltaic Environment - SPE 177620 – MS
Spectral Noise Logging technique has been utilized to estimate the average reservoir pressure for each perforated layer in a multi-zone single completion oil producer. The noise logging survey has been carried out under flowing conditions with 3 different rates (see figure 3).

The main conclusions were as follows:
(1) The pressures estimated by the TSNL technique without shutting-in the well were in good agreement with the Open Hole For-

mation Tester pressures. Additionally SNL determined the effective flow thicknesses of all layers, identified the source of produced water and also tested intervals untested by RFT;
(2) The technology does not require shutting in the well, although it requires stable flow at conditions above fluid saturation point (single phase);
(3) This technology is particularly suited for when target zone is behind a tubing, such as in dual string well comple-

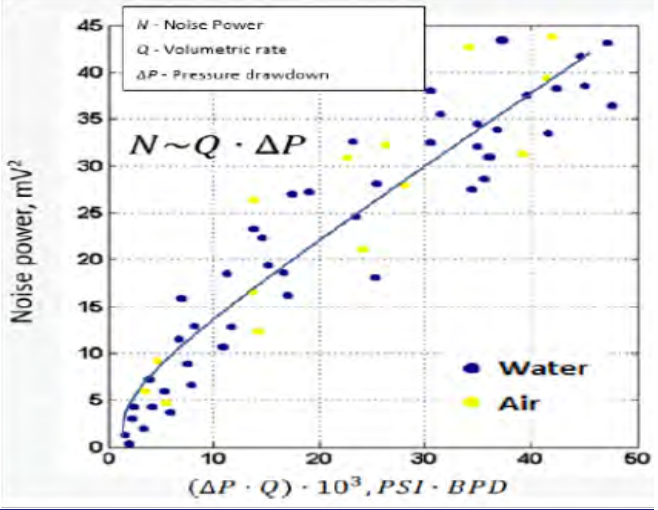


Fig 2: First realization of linear Q.dP vs NP relationship (McKinley²)

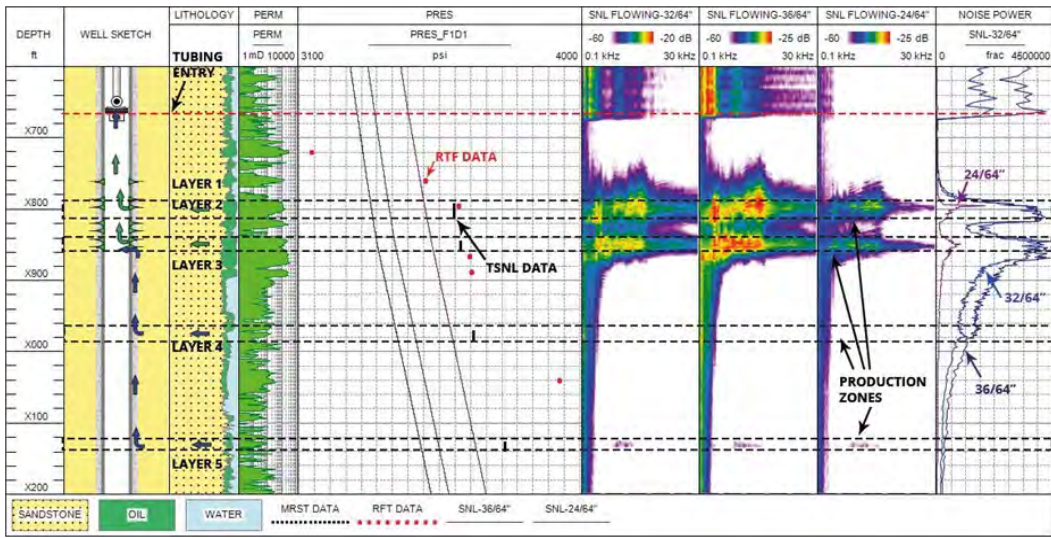


Fig 3: Tracks from left to right: depth, well schematic, lithology and saturation, permeability, pressure data (orange dot from RFT, black from TSNL, 3 pressure curves for each flow rate), SNL data for flow rate 1, 2 and 3, Noise Power curves derived from each SNL profile

tions with a need for pressure measurement of the formation producing through the short tubing string, or for a non-perforated reservoir communicating with the wellbore through a cement channel.

Table 1: Verified TSNL Job Summary

Company	Formation Type	Fluid Type	Permeability mD	Prod Rate bpd	Inj Rate bpd	No. of Layers	Flowing Pressure psi	Determined Pressure psi	Offset Pressure psi
na ¹	heterogeneous sstn	Water	19		157 - 1270	1	3980 - 5147	2980	SIBHP 2926
KOC ²	sstn	Oil	700	1200 - 1900		3	3316 - 3485	3598 , 3617, 3761	RFT 3611, 3648, not tested
ADMA ³	lmstn	Oil	90 - 100				3104 - 3326	3360	RFT 3403
na	semi-cemented sstn	Oil w/ high GOR	200	circa 2500		14	1810 - 1880	1837 - 1916	cross well verification
na	semi-cemented sstn	Oil	200	circa 1900		11	1860 - 1960	1882 - 1962	cross well verification
na	sstn	Oil	106 & 35	circa 300		2	3000 - 3060	3267 & 3092	3233 SIBHP

1 – SPE 182856, Formation Pressure Evaluation for Producing Wells Without Shutting Down the Well, Using Triple Spectral Noise Logging TSNL, 2016
2 – SPE 177620, Quantification of Reservoir Pressure in Multi-Zone Well under Flowing Conditions Using Spectral Noise Logging Technique, Zubair Reservoir, Raudhatain Field, North Kuwait, 2015
3 – SPE 177892, Formation Pressure Evaluation for Producing Wells Without Shutting Down the Well, Using Multi Rate High Precision Temperature and Spectral Noise Logging (HPT-SNL), 2015

¹ R.M. McKinley, F.M. Bower, R.C. Rumble. The Structure and Interpretation of Noise from Flow Behind Cemented Casing, Journal of Petroleum Technology, 3999-PA